



From a creative idea comes simple, integrated, linear and swing motions.

The swing cylinders can provide linear and swing motions alternatively or simultaneously.

While such multiple action has until now required separate units, the swing cylinders integrate these motions for ease of use. Cylinder bore sizes are ϕ 25 [0.984in.] and ϕ 40 [1.575in.], while the swing angles are 45°, 90°, 135°, and 180°.

Features

- Greatly reduces design hours compared with that required for use of separate units for linear and swing operations.
- **2.** A fine adjusting mechanism for swing angles allows any angle settings.
- **3.** A spherical bearing is built into the piston, to obtain light and smooth swing motion.
- 4. Sensor switches can be mounted on both the cylinder and swing portions, for exceptionally easy control.

Configuration

Basic type




Flange mounting type

Square rod end type





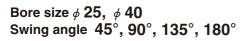




Cylinder with magnet



Effective Torque of Swing Portion

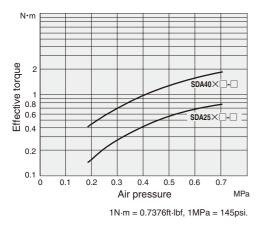

					N∙m	[ft·lbf]					
	Air pressure MPa [psi.]										
Model	0.2	0.3	0.4	0.5	0.6	0.7					
	[29]	[44]	[58]	[73]	[87]	[102]					
SDA25×□-□	0.167	0.294 [0.217]	0.422 [0.311]		0.667 [0.492]	0.794 [0.586]					
SDA40×□-□	0.461 [0.340]	0.735 [0.542]	1.01 [0.745]	1.294 [0.954]	1.559 [1.150]	1.834 [1.353]					

Air Consumption

Cylinder port	Cylinder portion cm ³ [in. ³]/Reciprocation (ANR)												
Model			Air pressure MPa [psi.]										
woder	0.2 [29]	0.3 [44]	0.4 [58]	0.5 [73]	0.6 [87]	0.7 [102]							
SDA25×15-	44 [2.69]	58 [3.54]	72 [4.39]	87 [5.31]	101 [6.16]	116 [7.08]							
SDA25×25-	73 [4.45]	96 [5.86]	120 [7.32]	144 [8.79]	168 [10.25]	192 [11.72]							
SDA25×50-	145 [8.85]	192 [11.72]	240 [14.65]	288 [17.57]	336 [20.50]	384 [23.43]							
SDA40×15-	111 [6.77]	148 [9.03]	184 [11.23]	221 [13.49]	258 [15.74]	294 [17.94]							
SDA40×25-	185 [11.29]	246 [15.01]	307 [18.73]	368 [22.46]	429 [26.18]	490 [29.90]							
SDA40×50-	370 [22.58]	492 [30.02]	613 [37.41]	735 [44.85]	858 [52.36]	980 [59.80]							
SDA40×75-	555 [33.87]	738 [45.04]	920 [56.14]	1110 [67.74]	1290 [78.72]	1470 [89.71]							
SDA40×100-	740 [45.16]	983 [59.99]	1230 [75.06]	1470 [89.71]	1720 [105.0]	1960 [119.6]							

Swing portion

Swing portio	n			cm ^a	[in.3]/Recipro	cation (ANR)						
Model			Air pressure MPa [psi.]									
Model	0.2 [29]	0.3 [44]	0.4 [58]	0.5 [73]	0.6 [87]	0.7 [102]						
SDA25×□-45	7.5 [0.458]	9.9 [0.604]	12.4 [0.757]	14.9 [0.909]	17.3 [1.056]	19.8 [1.208]						
SDA25×□-90	14.9 [0.909]	19.9 [1.214]	24.8 [1.513]	29.7 [1.812]	34.6 [2.111]	39.5 [2.410]						
SDA25×□-135	22.4 [1.367]	29.8 [1.819]	37.1 [2.264]	44.5 [2.716]	51.6 [3.149]	59.3 [3.619]						
SDA25×□-180	29.8 [1.819]	39.7 [2.423]	49.5 [3.021]	59.3 [3.619]	69.2 [4.223]	79 [4.821]						
SDA40×□-45	17.4 [1.062]	23.1 [1.410]	28.9 [1.764]	34.6 [2.111]	40.3 [2.459]	45.1 [2.752]						
SDA40×□-90	34.8 [2.124]	46.2 [2.819]	57.7 [3.521]	69.2 [4.223]	80.6 [4.919]	92.1 [5.620]						
SDA40×□-135	52.3 [3.192]	69.6 [4.247]	86.8 [5.297]	104.1 [6.353]	121.3 [7.402]	138.6 [8.458]						
SDA40×□-180	69.7 [4.253]	92.7 [5.657]	115.7 [7.060]	138.6 [8.458]	161.6 [9.861]	184.6 [11.265]						

SWING CYLINDERS

Cylinder Thrust

Select a suitable cylinder bore size considering the load and air pressure to obtain the required thrust.

Load Since the figures in the table are calculated values, select a bore size that results in a load ratio (load ratio = $\frac{\text{Load}}{\text{Calculated value}}$) of 70% or less (50% or less (50\% or or less for high speed application). N [lbf.]

_													[.ומו] או				
	Model	Piston rod size		Pressure area				Air pre	essure MP	a [psi.]							
	Model	mm [in.]	Operation	Operation	Operation	Operation	Operation	mm² [in.²]	0.1 [15]	0.2 [29]	0.3 [44]	0.4 [58]	0.5 [73]	0.6 [87]	0.7 [102]	0.8 [116]	0.9 [131]
	SDA25×□-□	□7.4	Push side	490 [0.760]	49 [11]	98 [22]	147 [33]	196 [44]	245 [55]	294 [66]	343 [77]	392 [88]	441 [99]				
	SDA25 X	× [0.291] Pull s	Pull side	436 [0.676]	43.6 [9.8]	87.2 [19.6]	130.8 [29.4]	174.4 [39.2]	218 [49.0]	261.6 [58.8]	305.2 [68.6]	348.8 [78.4]	392.4 [88.2]				
		□13	Push side	1250 [1.938]	125 [28]	250 [56]	375 [84]	500 [112]	625 [141]	750 [169]	875 [197]	1000 [225]	1125 [253]				
	SDA40×□-□	10 5 4 0 1	Pull side	1087 [1.685]	108.7 [24.4]	217.4 [48.9]	326.1 [73.3]	434.8 [97.7]	543.5 [122.2]	652.2 [146.6]	760.9 [171.1]	869.6 [195.5]	978.3 [219.9]				

Swing cylinders




Specifications


Туре	-	Basic type SDA25×□ SDA40×□ Specification angle -45 -90 -135 -180 -45 -90 -13											
Item		Specification a	angle	-45	-90	-135	-180	-45	-90	-135	-180		
Media							A	ir			·		
Operating p	ressure ra	ange MPa	[psi.]				0.2~0.7 [29~102]						
Proof press	ure	MPa	[psi.]				1.03	[149]					
Operating te	emperatu	re range °C) [°F]	0~60 [32~140]									
Lubrication							Not re	quired					
	Operati	on type					Double a	cting type					
o	Operating	speed range mm/s [in	n./sec.]				50~500 [2	2.0~19.7]					
Cylinder portion	Cushior	า				(On both sides (I	Rubber bumper	r)				
portion	Port siz	е	Rc					/8					
	Stroke 1	olerance mm	ı [in.]				+1 +0	0.039					
	Operati	on type			Double a	acting piston typ	e with swing a	ngle adjustmen	t (Rack and pin	ion type)			
	Effective (at 0.5MF	torque Pa [73psi.]) N·m [ft·lbf]		0.549	[0.405]			1.294	[0.954]			
	Swing a	angle range		20°~105°	45°~105°	100°~195°	135°~195°	20°~100°	80°~100°	100°~190°	170°~190°		
	Backlas	sh			3.	5°			2.	5°			
Swing portion	Swing ti (at 0.5M without I	Pa [73psi.]	s	0.2~0.5	0.4~1.8	0.4~2.5							
Cushion						-	No	ne					
	Bore size	×stroke Note1 mm	n [in.]	16×6.3 [0.630×0.248]	16×12.6 [0.630×0.496]	16×18.9 [0.630×0.744]	16×25.2 [0.630×0.992]	20×9.4 [0.787×0.370]	20×18.8 [0.787×0.740]	20×28.3 [0.787×1.114]	20×37.7 [0.787×1.484		
	Allowabl	e energy Note2 J [i	in∙lbf]		0.002 (0.006) [0.018 (0.053)] 0.006 (0.02) [0.053 (0.18)]								
	Port siz	е	Rc				1/	/8					

Notes: 1. For the specification angle.

2. The allowable energy in () is obtained when the rod end specification is square.

Order Codes

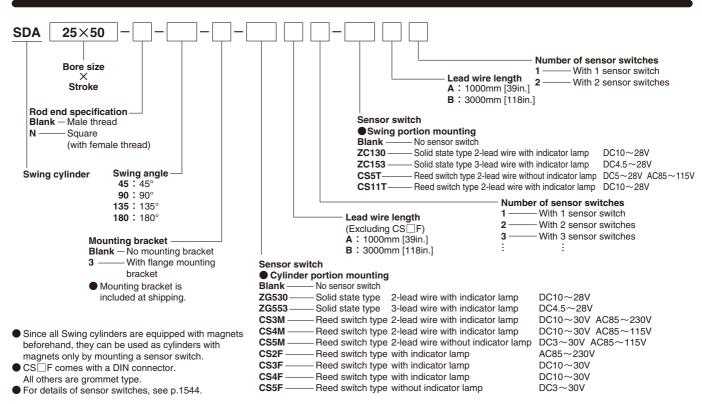

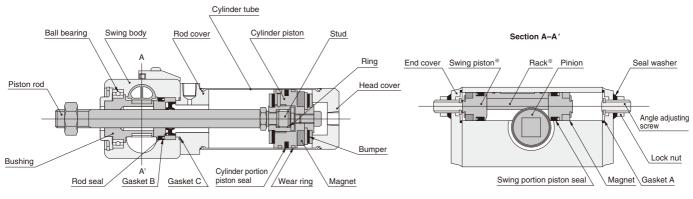

 $\$ Remark: Swing portion piston and rack are separated.

Major Parts and Materials

Cylinder portion

Parts	Materials
Cylinder tube	Stainless steel
Cylinder piston	Aluminum alloy (anodized)
Piston rod	Steel (hard chrome plated)
Rod cover	
Head cover	Aluminum alloy (anodized)
Stud	Steel (nickel plated)
Ring	Special steel (Plastic for SDA25)
Wear ring	Plastic
Seal	Synthetic rubber
Bumper	Synthetic Tubbel
Magnet	Plastic magnet

Swing portion

Parts	Materials					
Swing body						
End cover	Aluminum alloy (anodized)					
Pinion bushing	Plastic					
Rack	Plastic					
Ball bearing	Bearing steel					
Seal	Synthetic rubber					
Magnet	Plastic magnet					

Bore Size and Stroke

		mm
Model	Standard strokes	Maximum available stroke
SDA25×□-□	15 25 50	150
SDA40×□-□	15 25 50 75 100	300


Mass

					kg [lb.]]			
Item	Model	SDA25×□-45, 90	SDA25×□-135, 180	SDA40×□-45, 90	SDA40×□-135, 180	RS			
Zero stroke mass		0.55 [1.21]	0.71 [1.57]	1.10 [2.43]	1.34 [2.95]				
Additional mass for each	1mm [0.0394in.] stroke	0.0009	[0.0020]	0.0021	[0.0046]	Z			
Mass of flange mount	ing bracket	0.17	[0.37]	0.23 [0.51]					
Mass of cylinder	ZG5 ,CS M		0.030	[0.066]		C 5			
portion sensor switch	CS□F		0.060	[0.132]		Ĩ			
Maria de la contra de la	ZC1		0.022	[0.049]		SM			
Mass of swing portion sensor switch	CS5T		0.022	[0.049]					
	CS11T	0.022 [0.049]							

% The sensor switch mass is the mass of 1 sensor switch including a holder.

Calculation example: Mass of SDA25×50-90 with a flange mounting bracket and sensor switches (ZG530: 2 pcs., ZC130: 2 pcs.), 0.55+(0.0009×50)+0.17+(0.030×2)+(0.022×2)=0.869kg [1.916lb.]

Dimensions (mm)

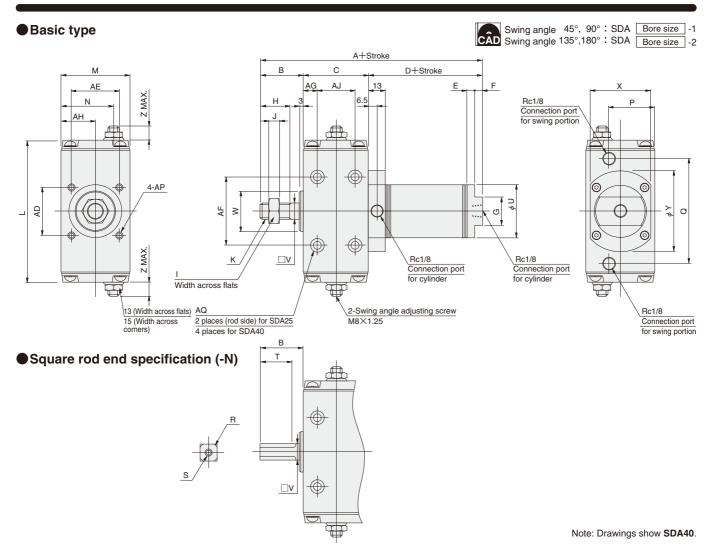


Model Code	Α	В	С	D	Е	F	G	н	I	J	К	L	М	Ν
SDA25×□-45, SDA25×□-90	133	29	44	60	4	5	19	18	12	5	M8×1	90	44	34
SDA25×□-135, SDA25×□-180	133	29	44	60	4	5	19	18	12	5	M8×1	115	44	34
SDA40×□-45, SDA40×□-90	154	34	52	68	6	6	22	23	19	8	M14×1.5	112	54	41.5
SDA40×□-135, SDA40×□-180	154	34	52	68	6	6	22	23	19	8	M14×1.5	150	54	41.5

Model Code	Р	Q	R	S	т	U	V	W	Х	Y	ZNote
SDA25×□-45, SDA25×□-90	30	63	\$\$\phi_0 \ 8_{-0.022}	M4×0.7 Depth6	18	26.4	7.4	20	38	45	11.6 (18.6)
SDA25×□-135, SDA25×□-180	30	88	\$\$\phi_0.022\$\$	M4×0.7 Depth6	18	26.4	7.4	20	38	45	11. 6 (18.6)
SDA40×□-45, SDA40×□-90	36	83	φ 15_0_027	M6×1 Depth8	25	41.6	13	32	48	64	11.2 (18.2)
SDA40 ×□-135, SDA40 ×□-180	36	121	\$\$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$	M6×1 Depth8	25	41.6	13	32	48	64	11.2 (18.2)

Model	AD	AE	AF	AG	AH	AJ	AP	AQ
SDA25×□-45, SDA25×□-90	25	25	42	8	22		M5×0.8 Depth10	ϕ 6.6 Counterbore ϕ 11 Depth6.3
SDA25 ×□-135, SDA25 ×□-180	25	25	42	8	22		M5×0.8 Depth10	ϕ 6.6 Counterbore ϕ 11 Depth6.3
SDA40×□-45, SDA40×□-90	38	38	54	11	27	30	M6×1 Depth10	ϕ 6.6 Counterbore ϕ 11 Depth6.3
SDA40×□-135, SDA40×□-180	38	38	54	11	27	30	M6×1 Depth10	ϕ 6.6 Counterbore ϕ 11 Depth6.3

Note : Figures in parentheses () are for -45 and -135 models.

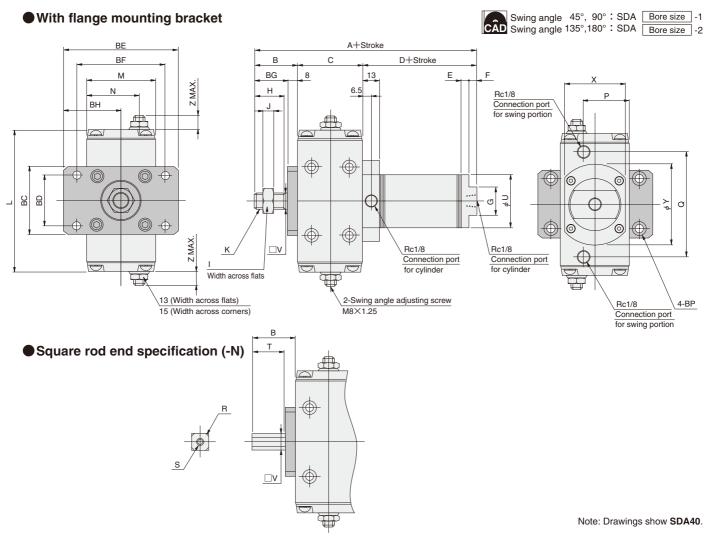

Model Code	Α	В	С	D	Е	F	G	Н	I	J	К	L	М	N
SDA25×□-45, SDA25×□-90	133	29	44	60	4	5	19	18	12	5	M8×1	90	44	34
SDA25×□-135, SDA25×□-180	133	29	44	60	4	5	19	18	12	5	M8×1	115	44	34
SDA40×□-45, SDA40×□-90	154	34	52	68	6	6	22	23	19	8	M14×1.5	112	54	41.5
SDA40×□-135, SDA40×□-180	154	34	52	68	6	6	22	23	19	8	M14×1.5	150	54	41.5


Model Code	Р	Q	R	S	т	U	v	Х	Y	Z ^{Note}
SDA25×□-45, SDA25×□-90	30	63	\$ 8_0.022	M4×0.7 Depth6	18	26.4	7.4	38	45	11.6 (18.6)
SDA25×□-135, SDA25×□-180	30	88	\$\$\phi_0 \\ 0.022\$\$	M4×0.7 Depth6	18	26.4	7.4	38	45	11.6 (18.6)
SDA40×□-45, SDA40×□-90	36	83	φ 15 _0.027	M6×1 Depth8	25	41.6	13	48	64	11.2 (18.2)
SDA40×□-135, SDA40×□-180	36	121	φ 15 _0.027	M6×1 Depth8	25	41.6	13	48	64	11.2 (18.2)

Model	BC	BD	BE	BF	BG	BH	BP
SDA25×□-45, SDA25×□-90	44	30	75	60	21	37.5	ϕ 5.5 Counterbore ϕ 9.5 Depth5.4
SDA25×□-135, SDA25×□-180	44	30	75	60	21	37.5	ϕ 5.5 Counterbore ϕ 9.5 Depth5.4
SDA40×□-45, SDA40×□-90	54	40	90	70	26	45	ϕ 6.5 Counterbore ϕ 11 Depth6.5
SDA40×□-135, SDA40×□-180	54	40	90	70	26	45	ϕ 6.5 Counterbore ϕ 11 Depth6.5

Note : Figures in parentheses () are for -45 and -135 models.

SENSOR SWITCHES

Solid State Type, Reed Switch Type

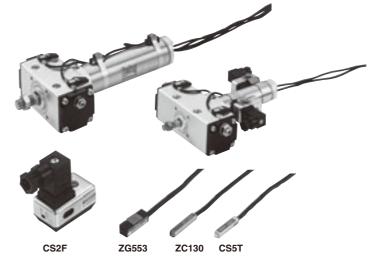

Minimum Cylinder Stroke When Mounting Sensor Switches


Minimum cylinder stroke for sensor switch mounting

Switch mou	illing		mm				
Sensor switch	Mour	Mounting 2 pcs.					
model	On straight line	When position is staggered	1 pc.				
ZG530	20	15	15				
ZG553	20	15	15				
CS	20	15	15				
CS□F	44	21	15				

Mounting 1 pc. A

Mounting 2 pcs.

(HI

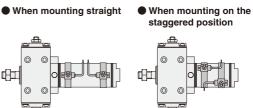

Order Codes for Sensor Switches


Swing portion (with mounting bracket)

	(itot)	Sensor switch model	Lead wire length	Basic type	Bore size
Solid state type 2-lead wire with indicator lamp	DC10~28V	ZC130			
Solid state type 3-lead wire with indicator lamp	DC4.5~28V	ZC153	•		25 [0.984in.]
Reed switch type 2- lead wire without indicator lamp	DC5~28V AC85~115V	CS5T	B	-SDA	40 [1.575in.]
Reed switch type 2-lead wire with indicator lamp	DC10~28V	CS11T			

Cylinder portion (with mounting bracket)


				Lead wire length	Basic type	Bore size	
Solid state type 2-lead wire	with indicator lamp	DC10~28V	ZG530				
Solid state type 3-lead wire	with indicator lamp	DC4.5~28V	ZG553				
Reed switch type 2-lead wire	with indicator lamp	DC10~30V	CC2M	S3M			
		AC85~230V	CS3M CS4M	Α	-SDA	05 [0 004]- 1	
Reed switch type 2-lead wire	with indicator lamp	DC10~28V		В	-504	25 [0.984in.]	
		AC85~115V	C54M				
Reed switch type 2-lead wire	with indicator lamp	DC3~30V	CS5M				
		AC85~115V	C35W			40 [1.575in.]	
Reed switch type	with indicator lamp	AC85~230V	CS2F			40 [1.57511.]	
Reed switch type	with indicator lamp	DC10~30V	CS3F		6		
Reed switch type	with indicator lamp	DC10~30V	CS4F		S		
Reed switch type	without indicator lamp	DC3~30V	CS5F				

Order codes for mounting bracket only (Swing portion)

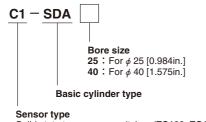

Solid state type sensor switches (ZC130, ZC153) Reed switch type sensor switches (CS5T, CS11T)



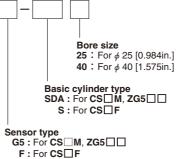

Sensor Switch Operating Range, Response Differential, and Maximum Sensing Location

● Operating range: ℓ

The distance the piston travels in one direction, while the switch is in the ON position.

Response differential: C

The distance between the point where the piston turns the switch ON and the point where the switch is turned OFF as the piston travels in the opposite direction.

• Cylinder portion

Cylinder portion mm [in.]									
Sensor switch model	CS	ZG5	CS						
Operating range : ℓ	7~10.5 [0.276~0.413]	2.5~4.2 [0.098~0.165]	8~12 [0.315~0.472]						
Response differential : C	1 [0.039] MAX.	0.7 [0.028] MAX.	1.5 [0.059] MAX.						
Maximum sensing location	11 [0.433] Note1	11 [0.433] Note1	16 [0.630] Note2						

Notes: 1. This is the length measured from the switch's opposite end side to the lead wire. 2. This is the length measured from the connector side end surface.


Swing portion

	511		mm [in.]	
Sensor switch model	CS5T	ZC1		
Operating range : ℓ	7~9.5 [0.2	2.5~4 [0.098~0.157]		
Response differential : C	1.5 [0.05	1.5 [0.059] MAX.		
Maximum sensing location Note	7 [0.276]	10.5 [0.413]	8.5 [0.335]	


Note: This is the length measured from the switch's opposite end side to the lead wire.


Dimensions (mm)

• Cylinder portion

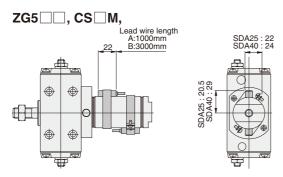



CS 🗌 F

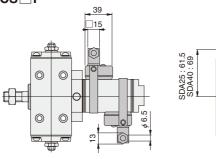


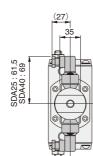


Swing portion

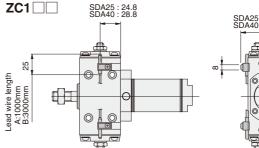


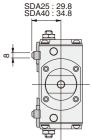

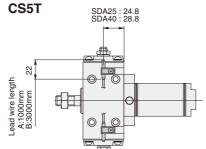


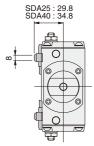

CS11T

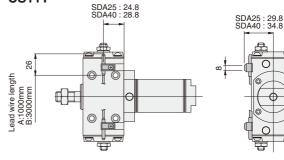

SWING CYLINDERS

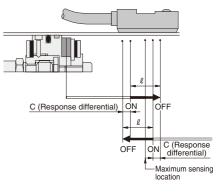



Selection and swing angle

Selection

- 1. Allow plenty of margin for swing output (torque). Select a model so that the required torque is 80% or less (50% or less for fluctuating loads) of the effective torque. The inertia load in swing operation becomes larger when the load mass is large, or during fast operating speeds, and it may exceed the allowable kinetic energy. In this case, install a shock absorber to prevent the Swing cylinder from being directly applied to inertia force.
- 2. Swing cylinders can have swing angles of $45^\circ,~90^\circ,~135^\circ,~or~180^\circ,~and~swing~angle$ adjustment is allowed within the ranges shown in the table below.

Model	Swing angle range
SDA25×□-45	20°~105°
SDA25×□-90	45°~105°
SDA25×□-135	100°~195°
SDA25×□-180	135°~195°
SDA40×□-45	20°~100°
SDA40×□-90	80°~100°
SDA40×□-135	100°~190°
SDA40×□-180	170°~190°

- Cautions: 1. The cylinder may be damaged if the kinetic energy is too large. Always use it under the maximum allowable energy.
 - 2. For details concerning kinetic energy, see the separate literature "Rotary Actuator Selection Materials.³

N [lbf]

Mounting

Although there is no particular restriction on mounting direction, ensure in vertical mountings that the piston rod and the load's applying point are aligned, and avoid applying off centered load. In addition, lateral loads on the piston rod should be at or below the values in the table below.

Allowable lateral load

Model	Stroke mm							
Woder	15	25	50	75	100			
SDA25	6.9 [1.55]	5.9 [1.33]	4.9 [1.10]	—	_			
SDA40	16.7 [3.75]	15.7 [3.53]	13.7 [3.08]	11.8 [2.65]	9.8 [2.20]			

- Cautions: 1. Since a large radial load, moment, eccentricity of rotating rod, or an excessive inertia load, could cause inaccurate operation, or damage to the swing cylinder, always take appropriate countermeasures
 - 2. There is a certain amount of backlash between the piston rod and bushing, which could result in deflection during swings. Note that deflection will increase at longer strokes or when lateral loads are applied.


Swing angle adjustment and swing time

1. The flat surface of the piston rod has been adjusted as follows at shipping. [90° and 180° specifications]

The flat surface of the piston rod at both swing ends is parallel to the plane of the swing portion's mounting surface.

[45° and 135° specifications]


Locate the mounting surface of the swing portion's sensor switch faces up, and set as shown in the diagrams below when it is at the left swing end, as viewed from the piston rod.

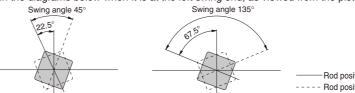

Rod position at left swing end Rod position at right swing end

Remark: To designate piston rod position relationships at swing angles or swing ends other than those diagrams above, consult us.

2. The swing angle is easily adjustable on the Swing cylinders. Loosening the lock nut and turning the adjusting screw to the right (clockwise) makes the swing angle smaller, while turning it to the left (counterclockwise) makes the swing angle larger.

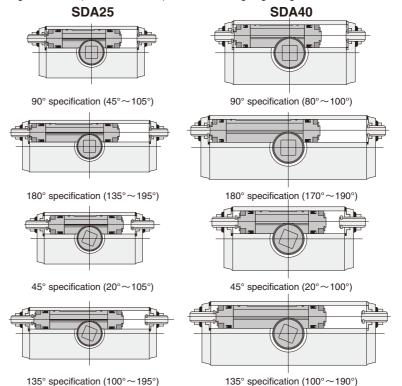

135° specification (100°~195°)

- Remark: The above diagrams show the state with the swing portion at the left swing end (as adjusted at shipping).
- Note: The swing angle ranges in parentheses show the minimum and maximum angles at which the angle can be adjusted with the swing angle adjusting screw. Care must be exercised, however, that the swing angle adjusting screw will protrude far from the body when adjusted to the maximum swing angle. Use close to the specification angle as much as possible.

In adjusting the swing angle to increase, however, do not let the adjusting screw protrude farther from the end surface of the swing portion shown in the table below.

		mm [in.]	Swing angle Sensor switch B Sensor switch A
Specification angle Model	45°,135°	90°,180°	adjusting screw B
SDA25	18.6 [0.732]	11.6 [0.457]	
SDA40	18.2 [0.717]	11.2 [0.441]	
			Swing angle Adjusting screw A Seal washer Connection port A Swing direction A Swing direction B

Supplying air to connection port A swings it to the direction A, and turns ON sensor switch A. On the other hand, supplying air to connection port B swings it to the direction B, and turns ON sensor switch B.



3. Use the table below as a guide for the swing time (the time from the start of the swing to the end of the swing).

Swing time at 0.5MPa air pressure without load


Model	Swing time						
wouer	45°	90°	135°	180°			
SDA25	0.2~0.5	0.2~0.5	0.4~0.8	0.4~1.0			
SDA40	0.2~1.0	0.2~1.2	0.4~1.8	0.4~2.5			

- Cautions: 1. The swing cylinder has a maximum backlash (play at swing end) of 3.5° for SDA25 and 2.5° for SDA40. For cases requiring precise positioning, install an external stopper, etc.
 - The recommended tightening torque for the lock nut is about 392N-cm [34.7in.lbf]. For tightening, use a 13mm [0.512in.] standard wrench. Avoid using monkey wrenches, etc. The end cover may be damaged if excessively tightened.
 - 3. When using reed type sensor switches on a swing portion, the sensor switch may malfunction during long swing time application. For low speed operations, use a solid state type sensor switch.
- Remarks: In addition to the standard specifications, the Swing cylinders series in the following specifications are available.
 - 1. No-backlash at swing end type
 - Double swing torque type (nobacklash at swing end) For details, consult us.

Mounting location and moving

Cylinder portion

When a sensor switch is mounted in the locations shown below, the magnet comes to the maximum sensing location of the sensor switch at the end of the stroke. By loosening the mounting screw, the sensor switch can be moved freely, along with the strap, in either the axial or circumferential directions. Cannot move the sensor switch alone.

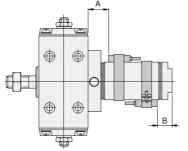

Mounting location of end of stroke detection sensor switch: A, B

				mm [in.]	
Cylinder type	Sensor switch type				
	ZG5 , CS M		CS□F		
	А	В	A	В	
SDA25×□-□	27 [1.06]	12 [0.47]	21 [0.83]	7 [0.28]	
SDA40×□-□	31 [1.22]	16 [0.63]	25 [0.98]	11 [0.43]	


Caution: For the sensor switch tightening torques, use the values listed below. ZG5 . CS M — 49N·cm [4.3in·lbf]

CSF — 68.6N·cm [6.1in·lbf]

Swing portion

When a sensor switch is mounted in the locations shown below, the magnet comes to the maximum sensing location of the sensor switch at the swing end.

To move the sensor switch, loosen the holder setscrew.

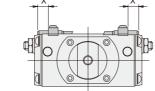

(The diagram shows a view from the head cover side)

Mounting location of sensor switch for specified angle detection: X mm [in.]

Cylinder model	Sensor switch type		
Cylinder model	CS5T	CS11T	ZC1
SDA25 X -45, 135	6 [0.236]	9.5 [0.374]	7.5 [0.295]
SDA25 × -90, 180	9 [0.354]	12.5 [0.492]	10.5 [0.413]
SDA40 X -45, 135	4.5 [0.177]	8 [0.315]	6 [0.236]
SDA40 × -90, 180	9.5 [0.374]	13 [0.512]	11 [0.433]

Cautions: 1. Set the holder mounting screw's tightening torque to 29.4N-cm [2.6in-lbf], as follows.

When the swing angle is adjusted to 60° or less, the left and right sensor switches may detect (turn on) at the same time, due to relationships of the sensor switch operating range and response differential. To prevent this, take one of the following measures.

① Set just one of either the left or right sensor switches.



General precautions

Piping

Always thoroughly blow off (use compressed air) the tubing before connecting it to the Swing cylinder. Entering metal chips, sealing tape, rust, etc., generated during piping work could result in air leaks or other defective operation.

Atmosphere

- If using in locations subject to dripping water, dripping oil, etc., or to large amounts of dust, use a cover to protect the unit.
- 2. The product cannot be used when the media or ambient atmosphere contains any of the substances listed below.

Organic solvents, phosphate ester type hydraulic oil, sulphur dioxide, chlorine gas, or acids, etc.

Lubrication

The product can be used without lubrication, if lubrication is required, use Turbine Oil Class 1 (ISO VG32) or equivalent.

Avoid using spindle oil or machine oil.

Media


- **1.** Use air for the media. For the use of any other media, consult us.
- Air used for the Swing cylinder should be clean air that contains no deteriorated compressor oil, etc. Install an air filter (filtration of a minimum 40 μm) near the Swing cylinder or valve to remove collected liquid or dust. In addition, drain the air filter periodically.

② Set the sensor switch to a location just off of the maximum sensing location (but still within the operating range) for detection.

 The small piston strokes in the swing portion can make it impossible to accurately detect the swing angle.

If precise angle detection is required, use an external limit switch, etc., for detection.

- 3. Since the rack and piston (magnet) are separate parts, moving the piston rod without applying air pressure may cause the sensor switches at both swing ends to enter the ON state. When checking operation of the swing portion sensor switches, always apply air pressure to check.
- If an external stopper, etc., is limiting the swing angle, care must be exercised that sensor switches in the above adjusting ranges may fail to operate.
- Caution when installing a sensor switch on the cylinder

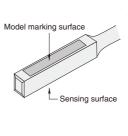

In the ZC type sensor switches, the opposite side from the model marking surface is the sensing surface side. Mount it so that the cylinder magnet comes to the sensing surface side.