KOGANEI

Catalog No.BK-R0003

http://www.koganei.co.jp IS09001 IS014001



Creceed

Static Electricity Removing Unit IONIZER WIDE FLOW FAN TYPE

Environmentally friendly RoHS Compliant Product



Swiftly removes staffs charges on with workpleces!

Lightweight, compact design
 Detachable mechanism for discharging needle units improves maintenance
 CE marking conformity

Creceed

Static Electricity Removing Unit IONIZER

IDE FLOW FAN TYPE


Environmentally friendly **RoHS** compliant product!

Features

- Available in 2 models according to where to install, and types of applications, thanks to no air supply requirement.
- Suitable for removing static charges on wide workpieces.
- Built-in low-noise cross-flow fan (48dB (A) or less).
- Detachable mechanism for discharging needle units improves maintenance.
- Main body height is adjustable to 3 different settings.
- Air flow rate adjusting knob enables you to obtain the required air flow rate.
- High frequency AC method provides good ion balance (within ±10 V).
- CE marking conformity products.


Air flow rate



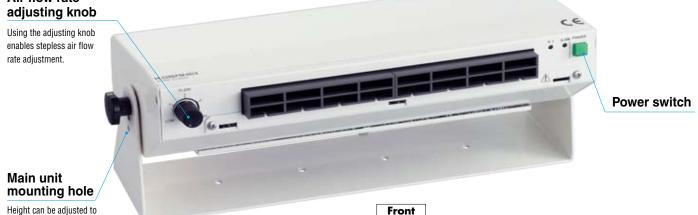

3 different settings.


Front (Photo:DTRY-ELW22)

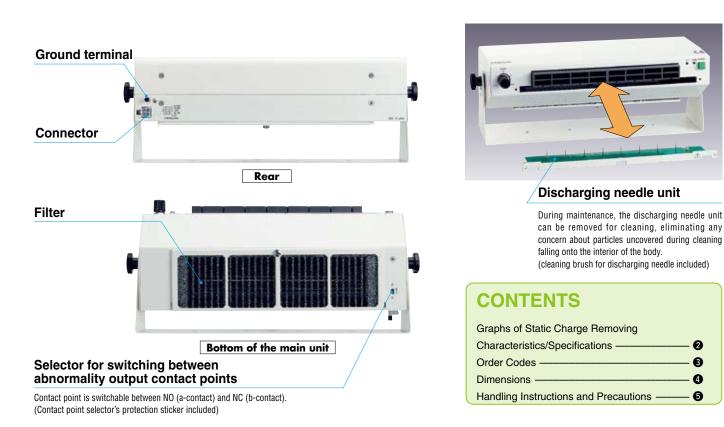

• Static charge removal range

Graphs of Static Charge Removing Characteristics/ Static Charge Removal Range (reference)

DTRY-ELW22

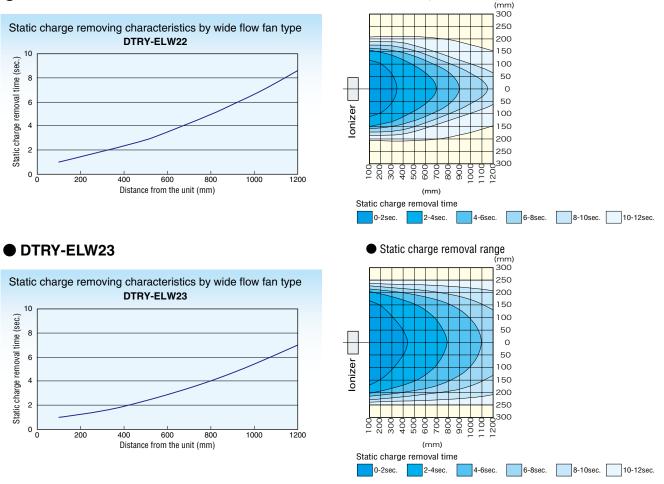

Notes: 1. The measurement method uses a 20pF and \Box 150mm charged plate monitor, measured under Koganei's general measurement conditions. 2. Static removal time means decaying time from \pm 100V to \pm 100V, without a filter and while at the maximum air flow rate.

3. The static charge removing characteristics were measured from the center of the fan outlet.

Specifications

Wide flow fan type

Item		Model	DTRY-ELW22	DTRY-ELW23	
Power supply			24VDC ± 5%		
Consumption current mA		mA	260	400	
Output voltage kV		kV	Approx. 2 (High frequency type)		
LED	Power supply		While the Power Switch is pushed ON, the Power Switch LED (lighted pushbutton switch: Green) and the H.V.power indicator LED (Green) on the front of the main unit turn on.		
Indicator	Abnormality		When an abnormality occurs during discharge, the abnormality indicator LED (Red) on the front of the main unit turns on.		
Power safety circuit			The contact point output NO/NC used on abnormality occurrence during discharge is selectable.Note1 (24 VDC 50 mA Max.)		
Outer dimensions Note2 mm		mm	120.5 (L) $\times 308$ (W) $\times 118$ (H)	$120.5 (L) \times 408 (W) \times 118 (H)$	
Mass	Mass kg [lb]		Approx. 2.1 [4.6]	Approx. 2.6 [5.7]	
Ion balance Note3 V		v	± 15		
Static charge removal time Note3 sec.		sec.	2 or less		
Ozone generation amount Note3 ppm		ppm	0.03 or less		
Fan	Max. flow rate m3/n	nin [ftː³/min.]	1.3 [46]	2.2 [78]	
capacity	Adjustment		Stepless adjustment by using the air flow rate adjusting knob		
Operating ambient temperature °C [°F]		°C [°F]	Indoor 0 \sim 40 [32 \sim 104] (no condensation)		
Accessories			Owner's manual, 1 pc. power and signal cable (2 m [78.7in.]), 1 pc. ground lead wire (2 m [78.7in.]), 1 pc. cleaning brush for discharging needle, and 1 pc. contact point selector's protection sticker		

Notes: 1. For output of abnormality output contact point, see page **6**.

Does not include protruding parts. The case of using the topmost level mounting holes on the main unit mounting bracket.
 At a point 300mm from the center of the fan outlet, at the maximum air flow rate.

Remark: Ion balance and static charge removal time were measured by in-house test standard. Contact us for more details.

Creceed

Order Codes

Wide Flow Fan Type

Main unit

DTRY-ELW22 (200mm opening type)




DTRY-ELW23 (300mm opening type)



Option

• Discharging needle unit for replacement (sales unit: 1 pc.)



• Replacement filter (sales unit: a set of 5 pcs.)



AC adapter
 DTRY-ELC04
 Rating

Input:100 VAC to 240 VAC 50/60 Hz 0.6 A Output:24 VDC 750 mA




Power signal cable (2m)
 DTRY-ADN-DSC
 Earth lead wires (2m)
 DTRY-ADN-YGC


Bracket (2 knob bolts, 2 rubber gaskets included)
 DTRY-ZBK-W22 (Only for DTRY-ELW22)
 DTRY-ZBK-W23 (Only for DTRY-ELW23)



Wide Flow Fan Type

• DTRY-ELW22

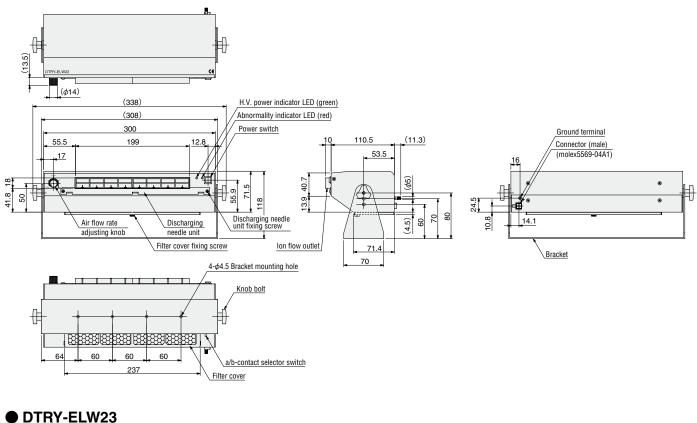

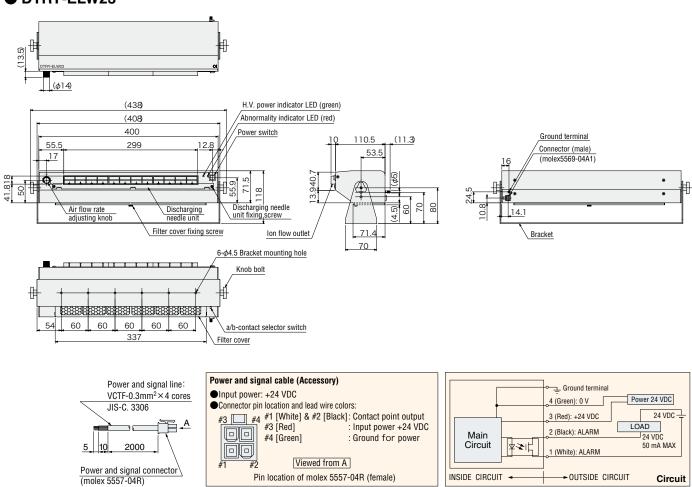

Notes 1: ON/OFF of the power to the lonizer should be done at the input side (+24 VDC side). 2: Ground for power and ground terminal are connected inside.

Handling Instructions and Precautions (Wide flow fan type)

Installation

When installing, ensure sufficient space so as not to block the suction opening.

Precaution on Use

- **1.** Before inspections, cleaning, or maintenance, be sure to disconnect the power cable from the connector.
- 2. The discharging needle has a sharp-pointed tip. Handle the discharging needle unit with care when removing or cleaning it. Otherwise it could possibly result in injury. Pay attention not to bend or break a discharging needle. Otherwise, you could not get the desired effect.
- **3.** Do not disassemble the discharging needle unit. Since the discharging needle has a sharp-pointed tip, you could be injured.
- 4. A poor operating environment (e.g., very humid conditions) or failure to clean the discharging needle will lead to degraded performance of the discharging needle. Hence, periodic maintenance is required to maintain performance. For maintenance, refer to the supplied instruction manual.
- 5. To turn ON/OFF externally, make it +24 VDC on the input side.

Output of abnormality output contact point

- 1. This product's abnormality output circuit starts normal operation about 2 seconds after the power is switched on. Be sure to take this point into consideration when designing an abnormality detection circuit for such as installing on equipment.
- 2. Abnormality output may occur if the power to the ionizer is switched off and then immediately switched on again. Allow an interval of at least 2 seconds after switching off the power before switching it on again.

For output at the time of setting each contact point, see the table below.

Setting MODE	Power OFF	Power ON	Abnormality
NO (a-contact)	OPEN	OPEN	CLOSE
NC (b-contact)	OPEN	CLOSE	OPEN



Always read Safety precautions for Static Electricity Removing Unit IONIZER (**Catalog No. BK-R0001**) before use.

Limited Warranty

KOGANEI CORP. warrants its products to be free from defects in material and workmanship subject to the following provisions.

Warranty Period	The warranty period is 180 days from the date of delivery.
Koganei Responsibility	If a defect in material or workmanship is found during the warranty period, KOGANEI CORP. will replace any part proved defective under normal use free of charge and will provide the service necessary to replace such a part.
Limitations	
	• This warranty is in lieu of all other warranties, expressed or implied, and is limited to the original cost of the product and shall not include any transportation fee, the cost of installation or any liability for direct, indirect or consequential damage or delay resulting from the defects.

- KOGANEI CORP. shall in no way be liable or responsible for injuries or damage to persons or property arising out of the use or operation of the manufacturer's product.
- This warranty shall be void if the engineered safety devices are removed, made inoperative or not periodically checked for proper functioning.
- Any operation beyond the rated capacity, any improper use or application, or any improper installation of the product, or any substitution upon it with parts not furnished or approved by KOGANEI CORP., shall void this warranty.
- This warranty covers only such items supplied by KOGANEI CORP. The products of other manufacturers are covered only by such warranties made by those original manufacturers, even though such items may have been included as the components.

The specifications are subject to change without notice.

Related catalog

IONIZER resolving problems caused by static charges. Wide variety of IONIZERs, which meet the need of pinpoint to wide-area static charge removal, are provided.



Static Electricity Removing Unit IONIZER Catalog No.BK-R0001

URL http://www.koganei.co.jp

E-mail: overseas@koganei.co.jp



KOGANEI CORPORATION

OVERSEAS DEPARTMENT 3-11-28, Midori-cho, Koganei City, Tokyo 184-8533, Japan Tel: 042-383-7271 Fax: 042-383-7276

 MICHIGAN REPRESENTATIVE OFFICE

 5070 East N Ave., Kalamazoo, Michigan, 49048, U.S.A.

 Tel: 269-388-8769
 Fax: 269-388-8771

SHANGHAI KOGANEI INTERNATIONAL TRADING CORPORATION

Room 2606-2607, Tongda Venture Building No.1, Lane 600, Tianshan Road, Shanghai, 200051, China Tel: 021-6145-7313 Fax: 021-6145-7323

KOGANEI-PORNCHAI CO., LTD.

Sey174 Mor 3, Vibhavadee Rangsit Road, Talad Bangkhen, Laksi, Bangkok, 10210, Thailand Tel: 02-551-4025 Fax: 02-551-4015

