AIR FILTERS

FN650, FN900, FN901

Symbol







Specifications


	Series	650 series	900 <	series					
	Туре		Standard	40µm type					
Item	Model	FN650	FN900	FN901					
Media		Air or non-corrosive gas							
Port size	Rc		3/4, 1						
Filtration rating	<i>μ</i> m		5	40					
Max. operating pre	ssure MPa [psi.]	0.97 [141]							
Proof pressure	MPa [psi.]	1.47 [213]							
Max. processed flow ra	te ℓ/min [ft³/min] (ANR)	3000 [106] 6000 [212]							
Operating tempera	ture range °C [°F]	5~60 [41~140]							
Drain capacity	cc [in.³]	90 [5.5]	90 [5.5] 130 [7.9]						
Maaa ka [lb]	Standard	0.58 [1.28]	1.11 [2.45]						
Mass kg [lb]	Auto drain type	0.61 [1.35]	0.61 [1.35] 1.14						
	Body	Aluminum die-casting							
Materials	Skirt part		Aluminum die-casting						
Materials	Bowl		Polycarbonate						
	Element	PE	PP						
Standard attachme	ents		Bowl guard, screw type drain cock						


Order Codes

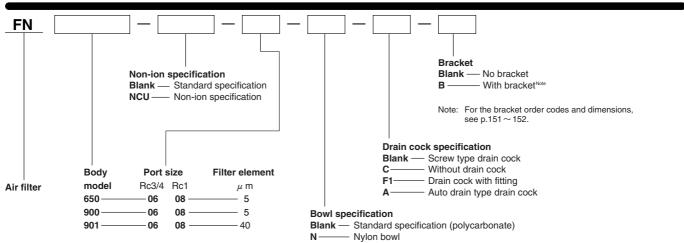


Flow Rate Characteristics

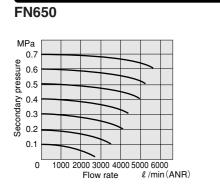

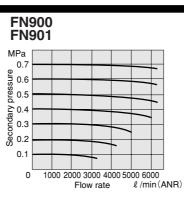

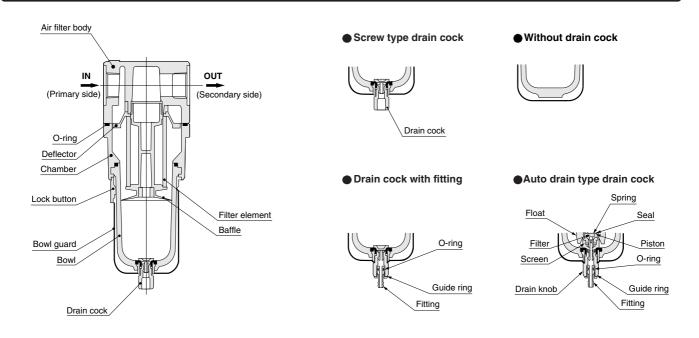


Inner Construction of Auto Drain

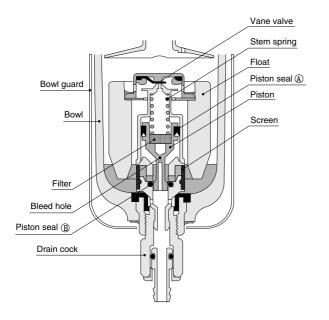


Remark: Air is exhausted from the drain port until the supply pressure rises to 0.15MPa [22psi.]. In this situation, even rotating the drain knob will not prevent the air from bleeding out.

Condition of collected liquid

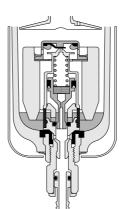

Condition of draining liquid

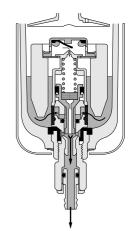

Operation principles


When liquid collects inside the bowl, the float rises and opens up the vane valve. Air brought to the top of the piston forces the piston downward, opening up the bottom of the piston and expelling liquid that has passed through the screen. As the liquid is drained out, the float falls, closing the vane valve. Air at the top of the piston is released through a bleed hole, and air pushes up on the piston from the bottom, returning the unit to the normal state.

If pressure inside the bowl is lost, the stem spring pushes down on the piston to drain out all of the liquid. After the liquid has been drained out, the air inside the bowl is also exhausted.

φ 15.5

Ť DRAIN

FN650

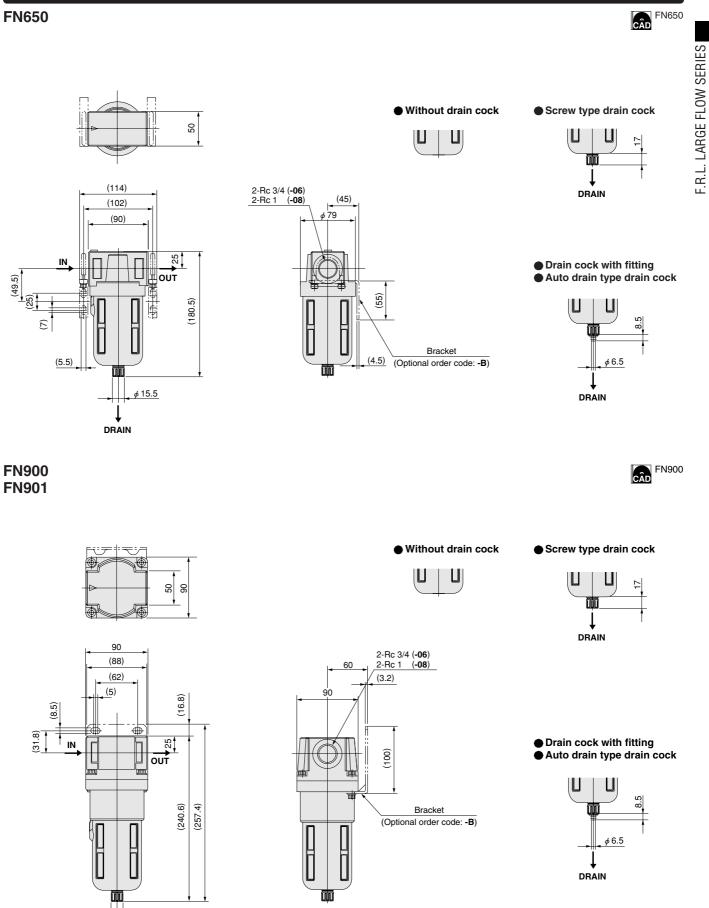

MODULES AND ADAPTERS





0

. .

Order Codes

8- Port size Rc ^{Note} 3/4, 1	
6 8 650, 900 Module and adapter F F F F module ND D D	e e
T T module DT T module for bracket-combined use R R module (For regulator only) M Piping supporting type M module (For regulator only) S S adapter DS S adapter module	
Body size Note: Port size selection is not allowed for F module (F), 65 For 650 series D module for bracket-combined use (ND), R 90 For 900 series module (R), and piping supporting type M module (M).	


Model List

	F module	D module	Tm	odule		
Modules and adapters	Fillodule	D module ND	Т			
Body size	(For modules only)	(Brackets for combined use)	(Branch piping)	(Brackets for combined use with branch piping)		
	(i of modules only)	,				
65	8-65F ● Applicable model FN650 RN650, RN651, RN652 LN650, LN651 FN900, FN901	8-65ND ● Applicable model CN650, CY650, CN750 FN650 RN650, RN651, RN652 LN650, LN651 FN900, FN901, LN900, LN901, LN902	8-65T ● Applicable model FN650 RN650, RN651, RN652 LN650, LN651 FN900, FN901	8-65DT • Applicable model FN650 RN650, RN651, RN652 LN650, LN651 FN900, LN901 LN900, LN901 8-90DT • Applicable model MF800, MF1000 MMF600, MMF800		
90	LN900, LN901, LN902	8-90ND ● Applicable model CZ650 MF800, MF1000 MMF600, MMF800	LN900, LN901, LN902			
Modules and	R module	M module	S ac	lapter		
adapters Body size	R (For semulator only)	M (For supporting regulator piping only)	S (Pot connection)	DS Billion (Brackets for combined use with piping connection)		
2003/0.20	(For regulator only)	(For supporting regulator piping only)	(Port connection)	, , , , , , , , , , , , , , , , , , , ,		
			8-65S ● Applicable model FN650	8-65DS ● Applicable model FN650 BN650 BN651 BN652		
65	_	_	RN650, RN651, RN652 LN650, LN651 FN900, FN901 LN900, LN901, LN902	RN650, RN651, RN652 LN650, LN651 FN900, FN901 LN900, LN901, LN902		


Remark: The applicable models shown in the tables are typical examples. For details, see p.125.

● 8-65F

Dimensions of D Module for Bracket-combined Use (mm)

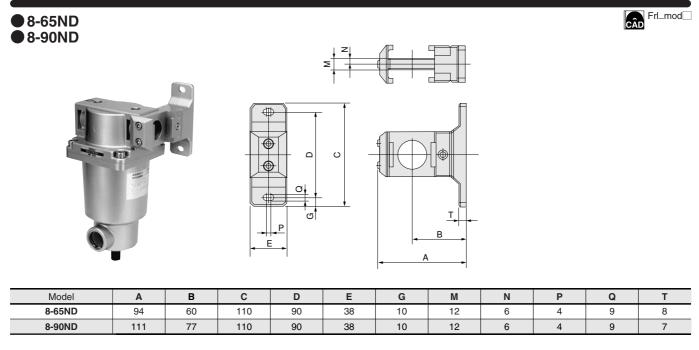


Dimensions of T Module (mm)

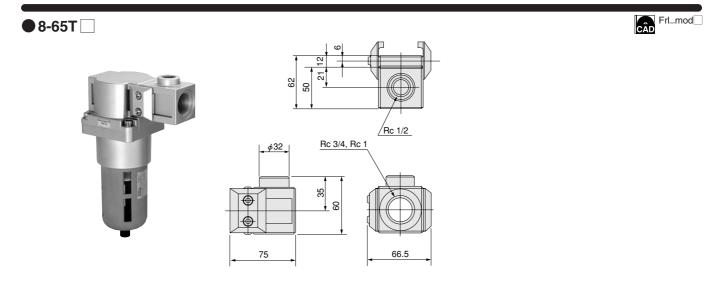

148

F.R.L. LARGE FLOW SERIES


Dimensions of T Module for Bracket-combined Use (mm)

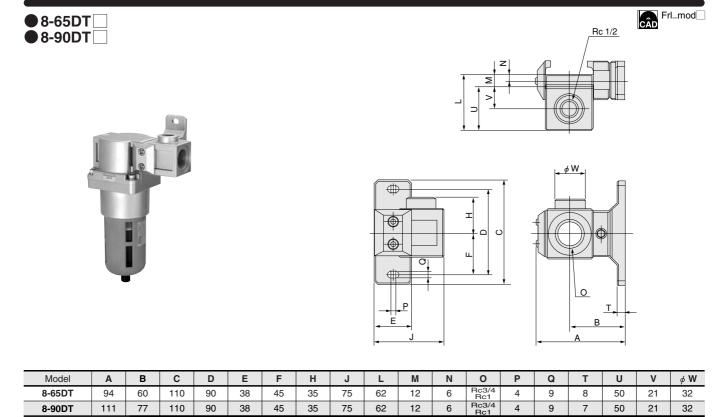

Dimensions of R Module (For Regulator Only) (mm)

8-90R



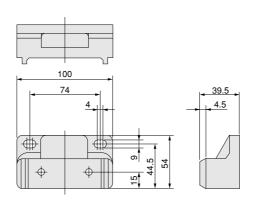


Dimensions of Piping Supporting Type M Module (mm)

8-90M


Frl_mod6

CÂD Frl_mod6




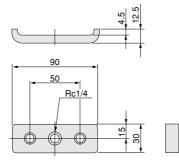

Dimensions of S Adapter (mm)

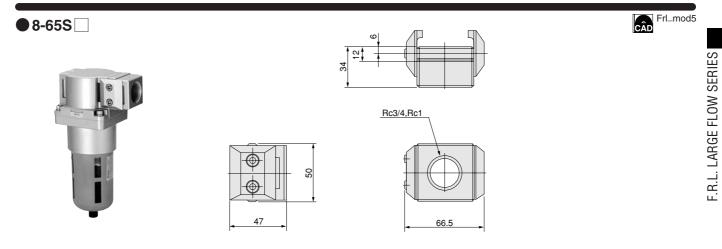

Dimensions of S Adapter Module (mm)

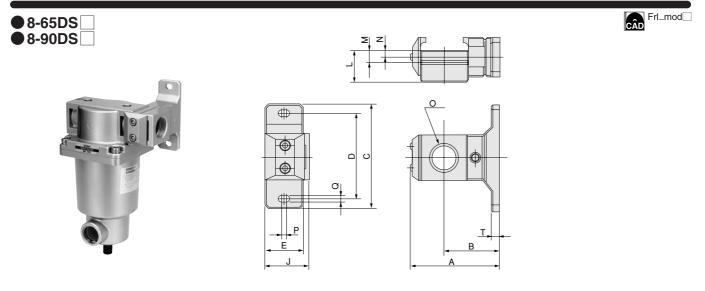

Model	Α	В	С	D	E	J	L	М	N	0	Р	Q	Т
8-65DS	94	60	110	90	38	47	34	12	6	Rc3/4 Rc1	4	9	8
8-90DS	111	77	110	90	38	47	34	12	6	Rc3/4 Rc1	4	9	7

BRACKETS




Bracket Models and Applicable Component

Component type		Bracket model	Remark		
Air filters	FN650	8-65B ^{Note}	Piping supporting type, optional		
Air liners	FN900	8-90A	Body supporting type, optional		
Mist filters	MF800	8-80A	Pody supporting type, optional		
Mist inters	MF1000	0-0UA	Body supporting type, optional		
Micro mist filters	MMF600	8-80A	Body supporting type, optional		
MICTO THIST HILETS	MMF800	0-0UA			
Degulatora	RN650	8-65	- Standard		
Regulators	RN900	8-90	Stanuaru		
Lubricators	LN650	8-65B ^{Note}	Piping supporting type, optional		
Lubicators	LN900	8-90A	Body supporting type, optional		


Note: Pipe supporting type brackets (8-65B) are sold in a set of two brackets.

For air filters, mist filters, micro mist filters, and lubricators
8-80A
8-90A



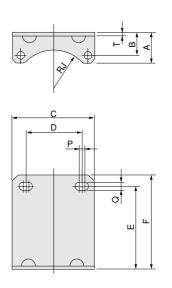


Model	Α	В	С	D	E	F	RJ	Р	Q	Т	Applicable model
8-80A	50	32	108	80	70	80	47	5	8.5	3.2	MF800, MF1000, MMF600, MMF800
8-90A	31	23	88	62	90	100	42	5	8.5	3.2	FN900, FN901, LN900, LN901, LN902

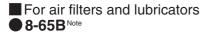




Note: Pipe supporting type brackets (8-65B) are sold in a set of two brackets.

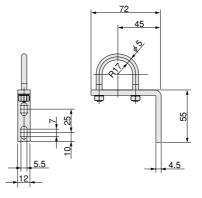





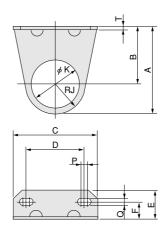

Model	Α	В	С	D	E	F	RJ	φ Κ	Р	Q	Т	Applicable model
8-65	72.5	45	70	45	30	20	27.5	45	5	8.5	3.2	RN650, RN651, RN652
8-90	91	60	86	60	30	20	31	52.5	5	8.5	3.2	RN900, RN902



F.R.L. Combinations

Installation location


- 1. Install in locations where the ambient temperature is between $5\,{\sim}\,60^\circ C$ [41 ${\sim}\,140^\circ F$].
- The product cannot be used when the media or the ambient atmosphere contains any of the substances listed below.
 Organic solvents, phosphate ester type hydraulic oil, sulphur dioxide,
- chlorine gas, acids, or alkali, etc.
- 3. Avoid installation in locations subject to vibrations greater than 9.8m/s $^{\rm 2}$ [1G].

Mounting method

Mount in a vertical position, with the piping connections on the top and the bowl on the bottom.

(If using regulators as single units, any mounting direction is acceptable.)

Leave enough space underneath the bowl to allow easy access for draining collected liquid, and replacement of the filter element.

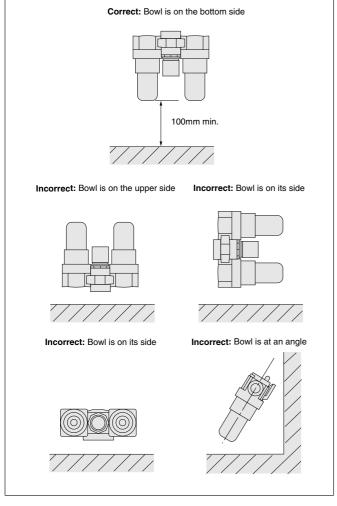

Notes: 1. Do not perform any machining on the body of the unit before or during mounting work. Its functions could be damaged.

- 2. Use air for the media.
- 3. Do not allow operating pressure to exceed a maximum of 0.97MPa [141psi.].
- If using in locations subject to dripping water, dripping oil, etc., or to large amounts of dust, use something to cover and protect the unit.



Air Filter and Lubricator

Drain cock

Screw type
Air filter Standard

Lubricator Order code: -D


With fitting


Air filter Order code: -F1 Lubricator Order code: -F2

Rotating the drain knob to the left

opens the drain port, and the

Rotating the drain knob to the left opens the drain port, and the collected liquid is expelled.

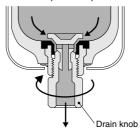


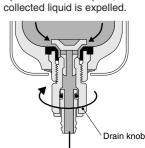

Caution: The drain knob should be operated using fingertips.

Auto drain type

(Air filter Order code: -A) When a certain volume of collected liquid has accumulated, or when the pressure inside the bowl has fallen to less than 0.02MPa [3psi.], the collected liquid is automatically expelled. The collected liquid may also be expelled manually by turning the drain knob to the left.

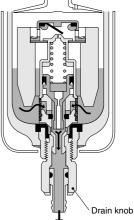

1. In the auto drain, air is exhausted from the drain port until the supply pressure reaches 0.15MPa [22psi.]. This is normal, and even rotating the drain knob in this situation will not prevent the air from bleeding out.

(If the time required for the supply pressure to rise to 0.15MPa [22psi.] seems too long, consult us.

- 2. The drain knob should be operated using fingertips.
- 3. If attaching a tube to the fitting, use a nylon tube with inner diameter of 6mm [0.236in.]. Do not let the tube bend in the area near the fitting connection.
- 4. The fitting can be rotated freely in any direction. As a result, the tube does not need to be removed even when manually draining the collected liquid.

When placing orders for replacement of pressure gauges, see the table below Module sold separately Model Optional order code Sold separately G1A G1-40 GS1A GS1-50-DL 650 GS1B GS1-50-AL 750 GS1C GS1-50-DL-T GS1D GS1-50-AL-T G1A G1-40 GS1A GS1-50-DL 900 GS1B GS1-50-AL 8-90M (with bolt) GS1C GS1-50-DL-T GS1D GSS1-50-AL-T Remark: If switching between G1A and GS1, module (8-90M) is not required.